

Trigger Perfect™


BY PINTRECH USA

Use on all types of drums,
rims, hoops and heads...
including woven mesh heads!

www.edrums.com


Tel: 1-800-455-0506 Fax: 1-866-445-0506

Made in USA US Patent No. 5,449,964

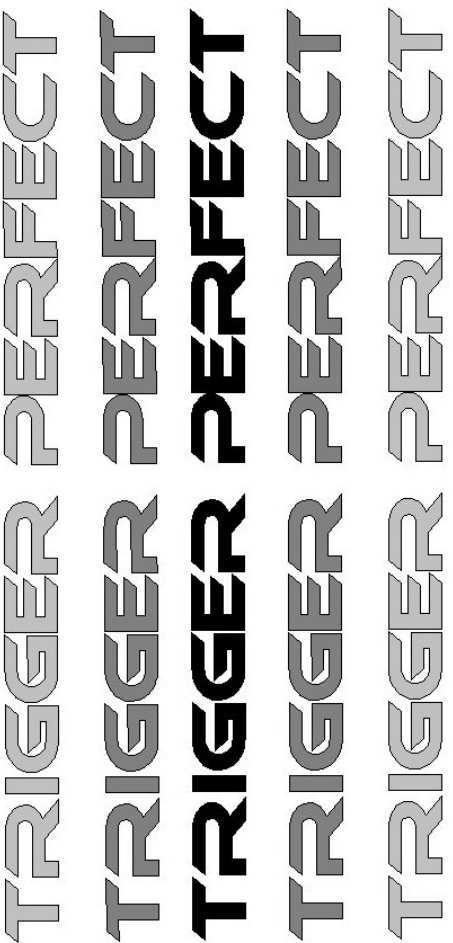

210AP / 210AP-S

250BD

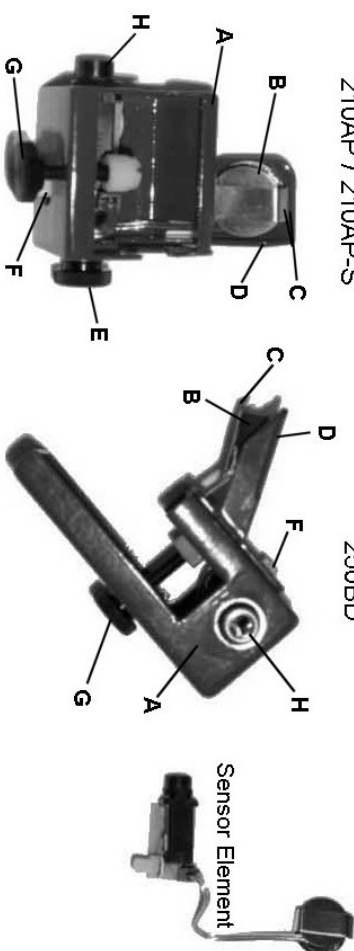

210AP Single Zone tom trigger

210AP-S Dual Zone snare drum trigger

250BD Single Zone bass drum trigger

Congratulations! You have just purchased the finest drum trigger available.

To mount your new Trigger Perfect drum trigger, first locate the best location on your rim or hoop. A suggested location would be at 12:00 for toms and snare, and at 8:00 or 4:00 on bass drums. For best results, do not locate bass drum trigger directly under snare or toms as the sound waves from these could result in unwanted cross-talk. Please read the following instructions.

- 1) Back out clamp knob(G) far enough to allow chassis(A) to fit over batter side rim or hoop. Tighten clamp knob enough to secure in place, **DO NOT OVER TIGHTEN** as this could cause damage to the trigger or possibly mar the drum rim or hoop.
- 2) Adjust sensor element arm(D) so that the sensor foot(C) makes contact with the drum head.
Note: DO NOT APPLY EXCESSIVE PRESSURE TO DRUM HEAD AS IT MAY DAMAGE SENSOR(B).
- 3) Connect to desired sound module using a standard 1/4" mono cable plugged into 1/4" jack(H) (or 1/4" stereo TRS cable when using the dual zone 210AP-S trigger).
- 4) The on-board sensitivity control(F) is designed to be a second level of control, with the drum trigger module being the main source of control. Use the on-board sensitivity control to raise or lower the overall sensitivity of the trigger and adjust all necessary parameters on the drum trigger module to suit the desired playing style. Refer to your drum trigger module's owners manual for information regarding drum triggering and parameter settings.

Trigger Perfect professional drum triggers are warranted against defects in materials and workmanship for a period of 90 days on the sensor element and one year on circuit board and chassis.

Manufacturer's liability shall be limited to the repair or replacement of warranted item. Any and all claims must be shipped freight prepaid to factory along with a copy of original sales receipt.

Contact manufacturer for return authorization number prior to returning any merchandise.