


Pintech USA  
PIN-7001 Rack Assembly Instructions

Please review your parts list to ensure you have all of the necessary components.

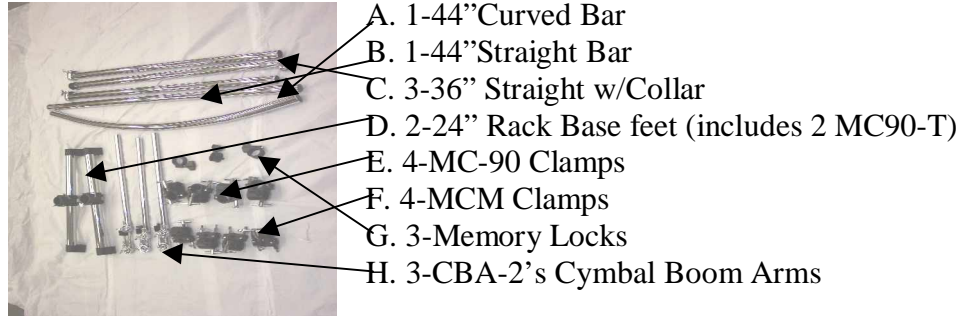

First you will need to locate the "Front Curved" bar (A) and leg assemblies (D).



1. Insert 2 of the 36" Straight w/collar (C) into the rack base feet (D) and attach one cross joint clamp (MC-90) (E) on each.



2. Next position the curved bar (A) between the legs (D,C) and tighten it into place with the MC-90 (E) clamps. Insert two of the cymbal boom arms (H) into the caps on the top of the legs (D,C). Attach two MCM's (F) and LR-78's (found in box 3 of kit) to the rack where you would like to position your toms.



Pintech USA  
PIN-7001 Rack Assembly Instructions  
(Cont.)

3. Locate the following components from rack box and 2 L-rods. (Located in Box 3 of your kit)



4. Attach the 44" straight bar (B) to the remaining 36" Straight w/collar (C), and form a "T" shape.



5. Stand the side of the rack up and mount the bottom end of the "T" to the main frame of the rack. Attach additional multi clamps (MCM-Box 3) and tom arms (LR-78-Box 3) on to the rack where you would like to position the toms (CC101ST-TE/VLT\*\*).



6. For Mounting your universal module mount (UM-1), please take the included 12" SL-tube and attach a MCM and a MC-90 to opposite ends (parts to be found in box 3 of kit. Attach the UM-1 to the SL-tube using the MCM. Using the MC90, attach the module mounting arm to the rack.

